


- NOTES:
1. ALARM WHEN PUMP HOA IS NOT IN AUTO AND CB IS NOT IN OPEN STATE.
 2. ALARM WHEN LT1 > 436 AND (LT2-LT1) > 2'.
 3. WHEN MP1 OR MP2 OR MP3 ARE ON AND LT1 < 433 OR FRB IS ON.
 4. SEE M-4 FOR PUMP CONTROL AND ALARM ELEVATIONS OF FLOATS AND LEVEL TRANSMITTER.
 5. SEE E-7 FOR OUTPUT WIRING TO CONTROL PANEL DEVICES.

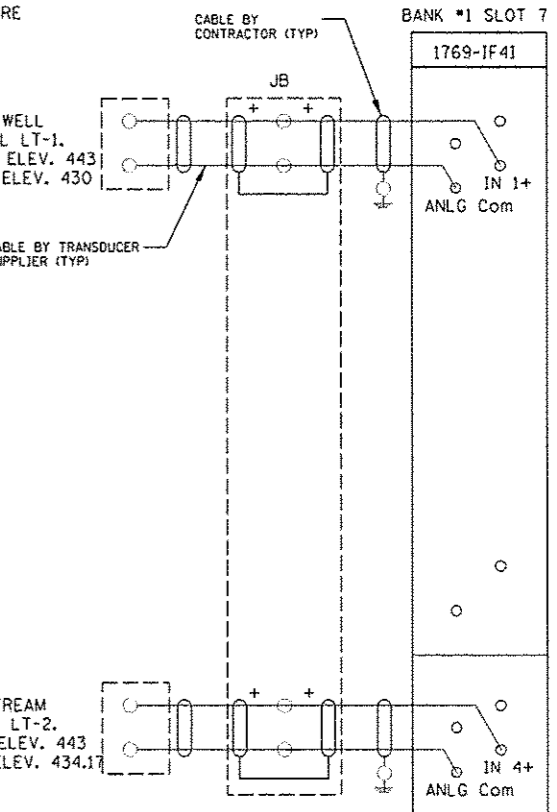

SEE E-7 FOR TERMINAL LEGEND