

TREE REMOVAL UNITS table with columns for LOCATION, 6-15 UNITS, and OVER 15 UNITS. Includes stationing and lane directions (LT, RT).

TREE REMOVAL ACRES table with columns for LOCATION and ACRES. Includes stationing and lane directions.

SIDEWALK REMOVAL table with columns for LOCATION and SQ FT. Includes stationing and lane directions.

MEDIAN REMOVAL table with columns for LOCATION and SQ FT. Includes stationing and lane directions.

CONCRETE HEADWALL REMOVAL table with columns for LOCATION and EACH. Includes stationing and lane directions.

CURB AND GUTTER REMOVAL table with columns for LOCATION, CURB REMOVAL, and COMBINATION CURB AND GUTTER REMOVAL. Includes stationing and lane directions.

PIPE CULVERT REMOVAL table with columns for LOCATION, SIZE, and FOOT. Includes stationing and lane directions.

SEGMENTAL CONCRETE BLOCK WALL table with columns for LOCATION and SQ FT. Includes stationing and lane directions.

PAVEMENT AND SHOULDER REMOVAL table with columns for LOCATION, PAVEMENT REMOVAL, DRIVEWAY PAVEMENT REMOVAL, and PAVED SHOULDER REMOVAL. Includes stationing and lane directions.

EARTHWORK SUMMARY table with columns for EARTH EXCAVATION, EARTH EXCAVATION ADJUSTED FOR SHRINKAGE, EMBANKMENT, and EARTHWORK BALANCE WASTE (+) OR SHORTAGE (-). Includes stationing and lane directions.

REVISION: REVISED 2/24/12