

CONTROLLER #9 MESSAGE AREA table with columns A, B, C and rows X30 to D1.

CONTROLLER #12 MESSAGE AREA table with columns A, B, C and rows 1 to 80.

CONTROLLER #14 MESSAGE AREA table with columns A, B, C and rows X1 to X27.

CONTROLLER #15 MESSAGE AREA table with columns A, B, C and rows E1 to X28.

CONTROLLER #17 MESSAGE AREA table with columns A, B, C and rows A1 to X19.

CONTROLLER #18 MESSAGE AREA table with columns A, B, C and rows EXB1 to D5.

CONTROLLER #19 MESSAGE AREA table with columns A, B, C and rows WXB2 to SM33.

CONTROLLER #20 MESSAGE AREA table with columns A, B, C and rows A23 to X5.

CONTROLLER #22 (1 OF 2) MESSAGE AREA table with columns A, B, C and rows A10 to X8.

CONTROLLER #22 (2 OF 2) MESSAGE AREA table with columns A, B, C and rows WX18 to WX42.

CONTROLLER #10 MESSAGE AREA table with columns A, B, C and rows M34 to M49.

CONTROLLER #13 MESSAGE AREA table with columns A, B, C and rows M81 to M90.

CONTROLLER #16 MESSAGE AREA table with columns A, B, C and rows M104 to M119.

CONTROLLER #16 MESSAGE AREA table with columns A, B, C and rows M104 to M135.

CONTROLLER #21 MESSAGE AREA table with columns A, B, C and rows NMB2 to X8.

CONTROLLER #11 MESSAGE AREA table with columns A, B, C and rows M50 to M57L.