



NOTE: PRC FLARED END SECTION SHOWN.
TREATMENT SAME FOR OTHER
END SECTIONS.

NOTE: TO BE USED AT
ALL END SECTIONS



**DETAIL OF EROSION CONTROL BLANKET
LINING AROUND END SECTION 251-2**

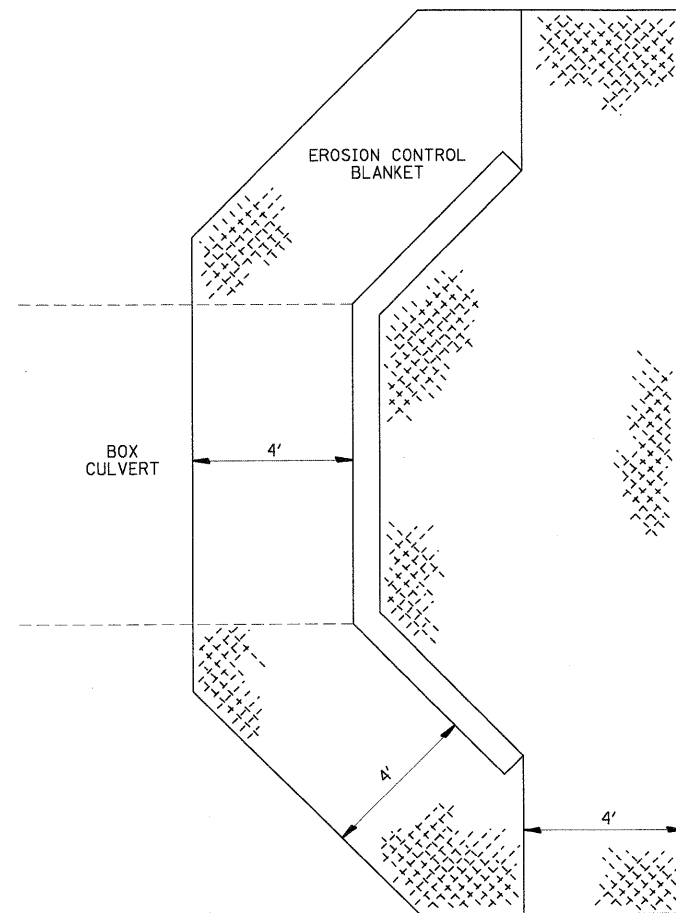

**EROSION CONTROL BLANKET
AT BOX CULVERT END SECTIONS 251-3**

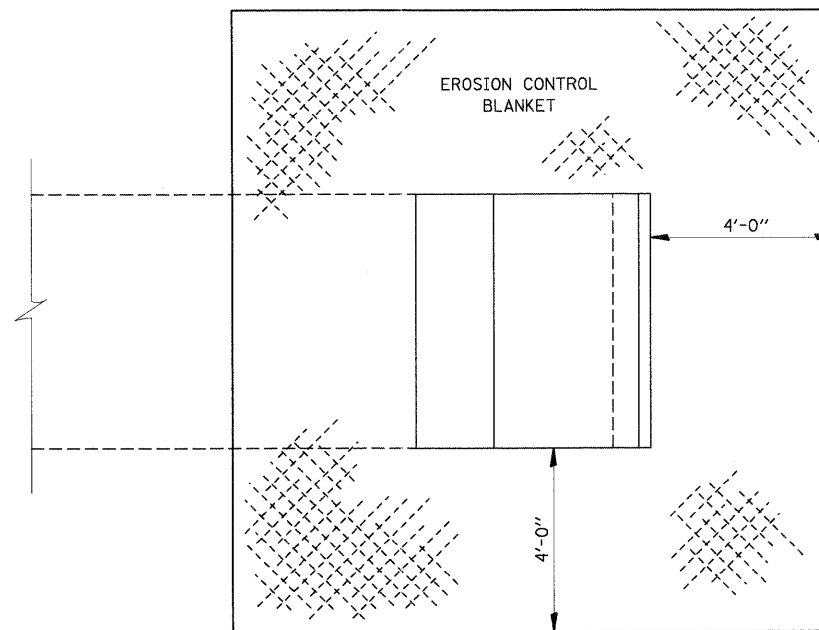

**EROSION CONTROL BLANKET AT PRECAST
BOX CULVERT END SECTIONS 251-5**

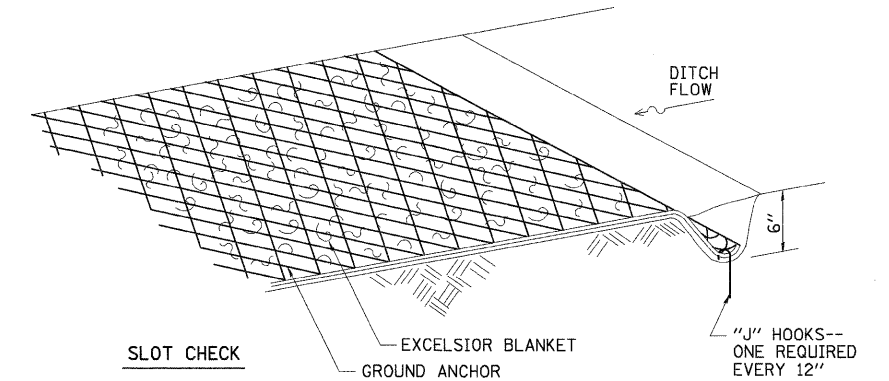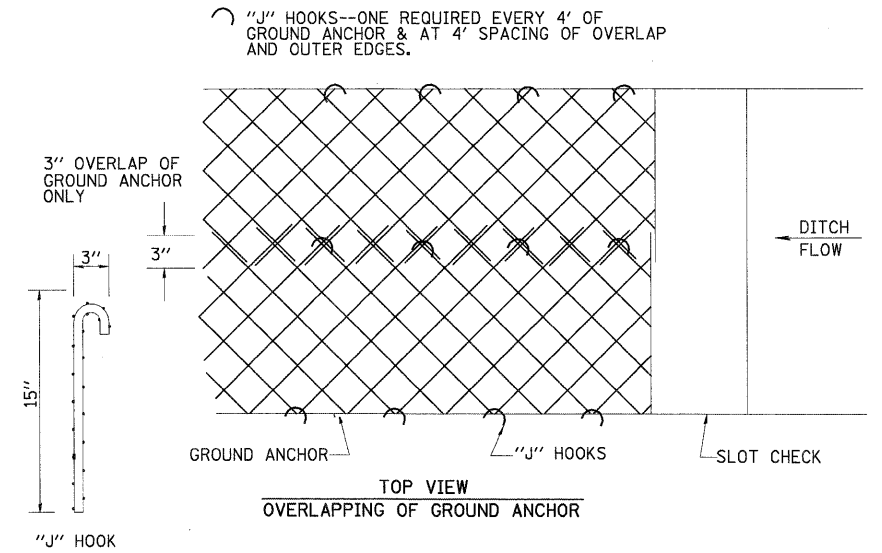

NOTES:

1. EXCELSIOR BLANKET IS STAPLED INTO GROUND.
2. GROUND ANCHOR GOES OVER EXCELSIOR BLANKET AND IS FASTENED WITH "J" HOOKS EVERY 4 FEET.
3. PAY WIDTH WILL BE MEASURED TO OUT-TO-OUT OF GROUND ANCHOR WITH NO CONSIDERATION FOR OVERLAPS.

EXCELSIOR BLANKET (SPECIAL) DETAILS 251-4