


- PAVEMENT PATCHING
- SHOULDER REMOVAL (FOR INSTALLATION OF FRENCH DRAIN)
- EARTH EXCAVATION (FOR INSTALLATION OF FRENCH DRAIN)

NOTES: PATCH AND FRENCH DRAIN LOCATIONS ARE APPROXIMATE.

SHOULDER REMOVAL AND REPLACEMENT FOR INSTALLATION OF FRENCH DRAINS SHALL BE MEASURED IN PLACE AND PAID FOR AS PAVEMENT PATCHING, TYPE I, 12".

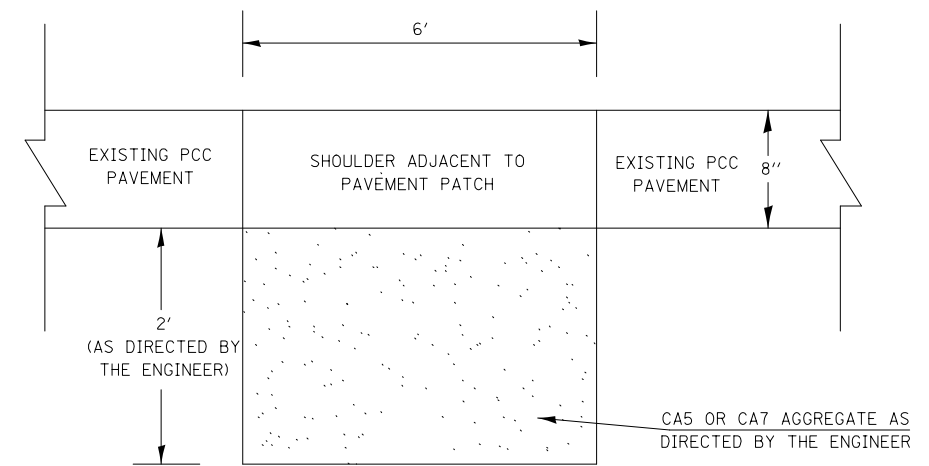

FRENCH DRAIN DETAIL

FILE NAME =	USER NAME = milecmr	DESIGNED -	REVISED -
et:\pw\work\p\dot\milecmr\d0345201\d876661-sht-pln.dgn		DRAWN -	REVISED -
PLOT SCALE = 100.0000' / 1in.		CHECKED -	REVISED -
PLOT DATE = 2/6/2014		DATE -	REVISED -

**STATE OF ILLINOIS
DEPARTMENT OF TRANSPORTATION**

**PATCHING AND FRENCH DRAINS
IL 177 OVER I-64**

SCALE: SHEET NO. OF SHEETS STA. TO STA.

F.A. RTE.	SECTION	COUNTY	TOTAL SHEETS	SHEET NO.
•	(109,110)RS-1, 31-2RS	WASHINGTON	40	21
•FAP 690/FAS 819/FAP 322		CONTRACT NO. 76G61		
FED. ROAD DIST. NO. ILLINOIS FED. AID PROJECT				