


DATE \_\_\_\_\_  
 BY \_\_\_\_\_  
 SURVEYED \_\_\_\_\_  
 CHECKED \_\_\_\_\_  
 NO. \_\_\_\_\_  
 SURVEYED \_\_\_\_\_  
 CHECKED \_\_\_\_\_  
 NO. \_\_\_\_\_  
 SURVEYED \_\_\_\_\_  
 CHECKED \_\_\_\_\_  
 NO. \_\_\_\_\_

DATE \_\_\_\_\_  
 BY \_\_\_\_\_  
 SURVEYED \_\_\_\_\_  
 CHECKED \_\_\_\_\_  
 NO. \_\_\_\_\_  
 SURVEYED \_\_\_\_\_  
 CHECKED \_\_\_\_\_  
 NO. \_\_\_\_\_  
 SURVEYED \_\_\_\_\_  
 CHECKED \_\_\_\_\_  
 NO. \_\_\_\_\_

PLOT DATE = 3/2/2009  
 FILE NAME = K:\111RS600\1 75-3p\_eas\Acada\Geo\10653+00.00\10653+00.00.dgn  
 SCALE = 1" = 40'  
 USER = JWH  
 MODEL = XS.SHEET.1

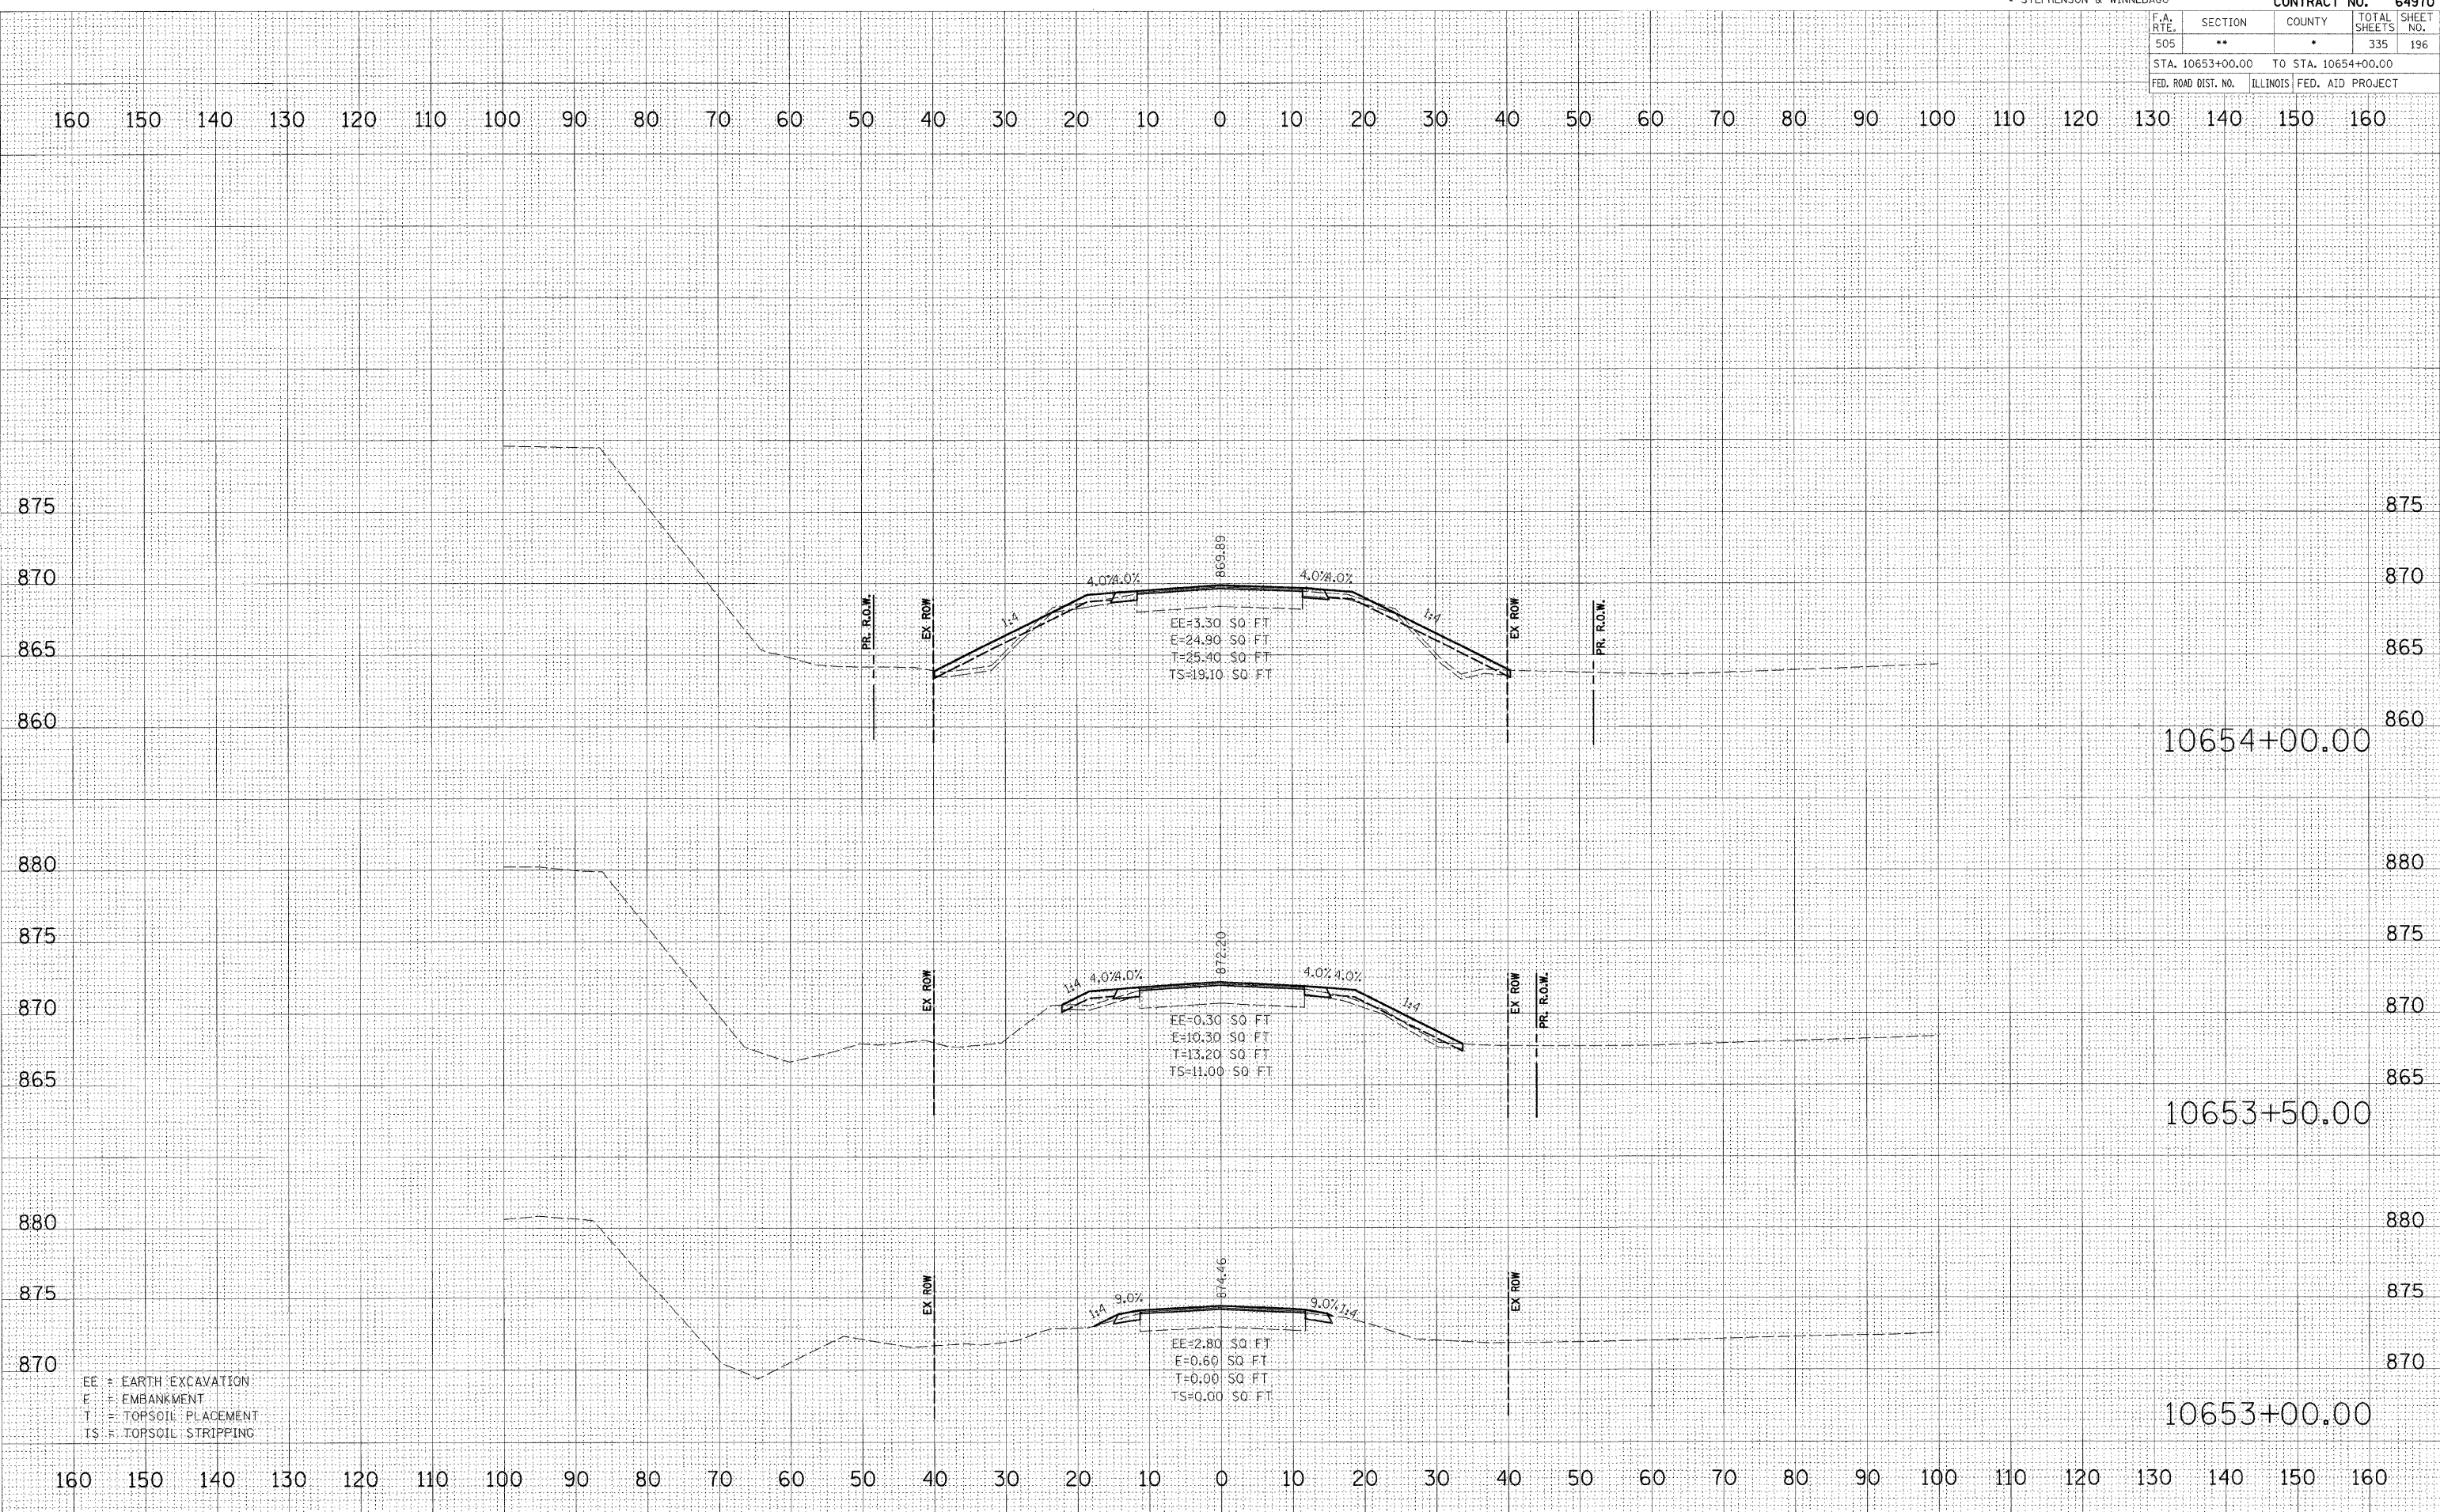

EE = EARTH EXCAVATION  
 E = EMBANKMENT  
 T = TOPSOIL PLACEMENT  
 TS = TOPSOIL STRIPPING