


GENERAL NOTES

AFTER ANCHOR BOLT IS INSTALLED & EPOXY HAS HARDENED

1. USE SILICONE CAULK TO SEAL LEAD ϕ & BASE ϕ WITH CONCRETE
2. FILL AREA A WITH 2 PART EPOXY, TO TOP OF BASE ϕ
3. INSTALL WASHER & NUT

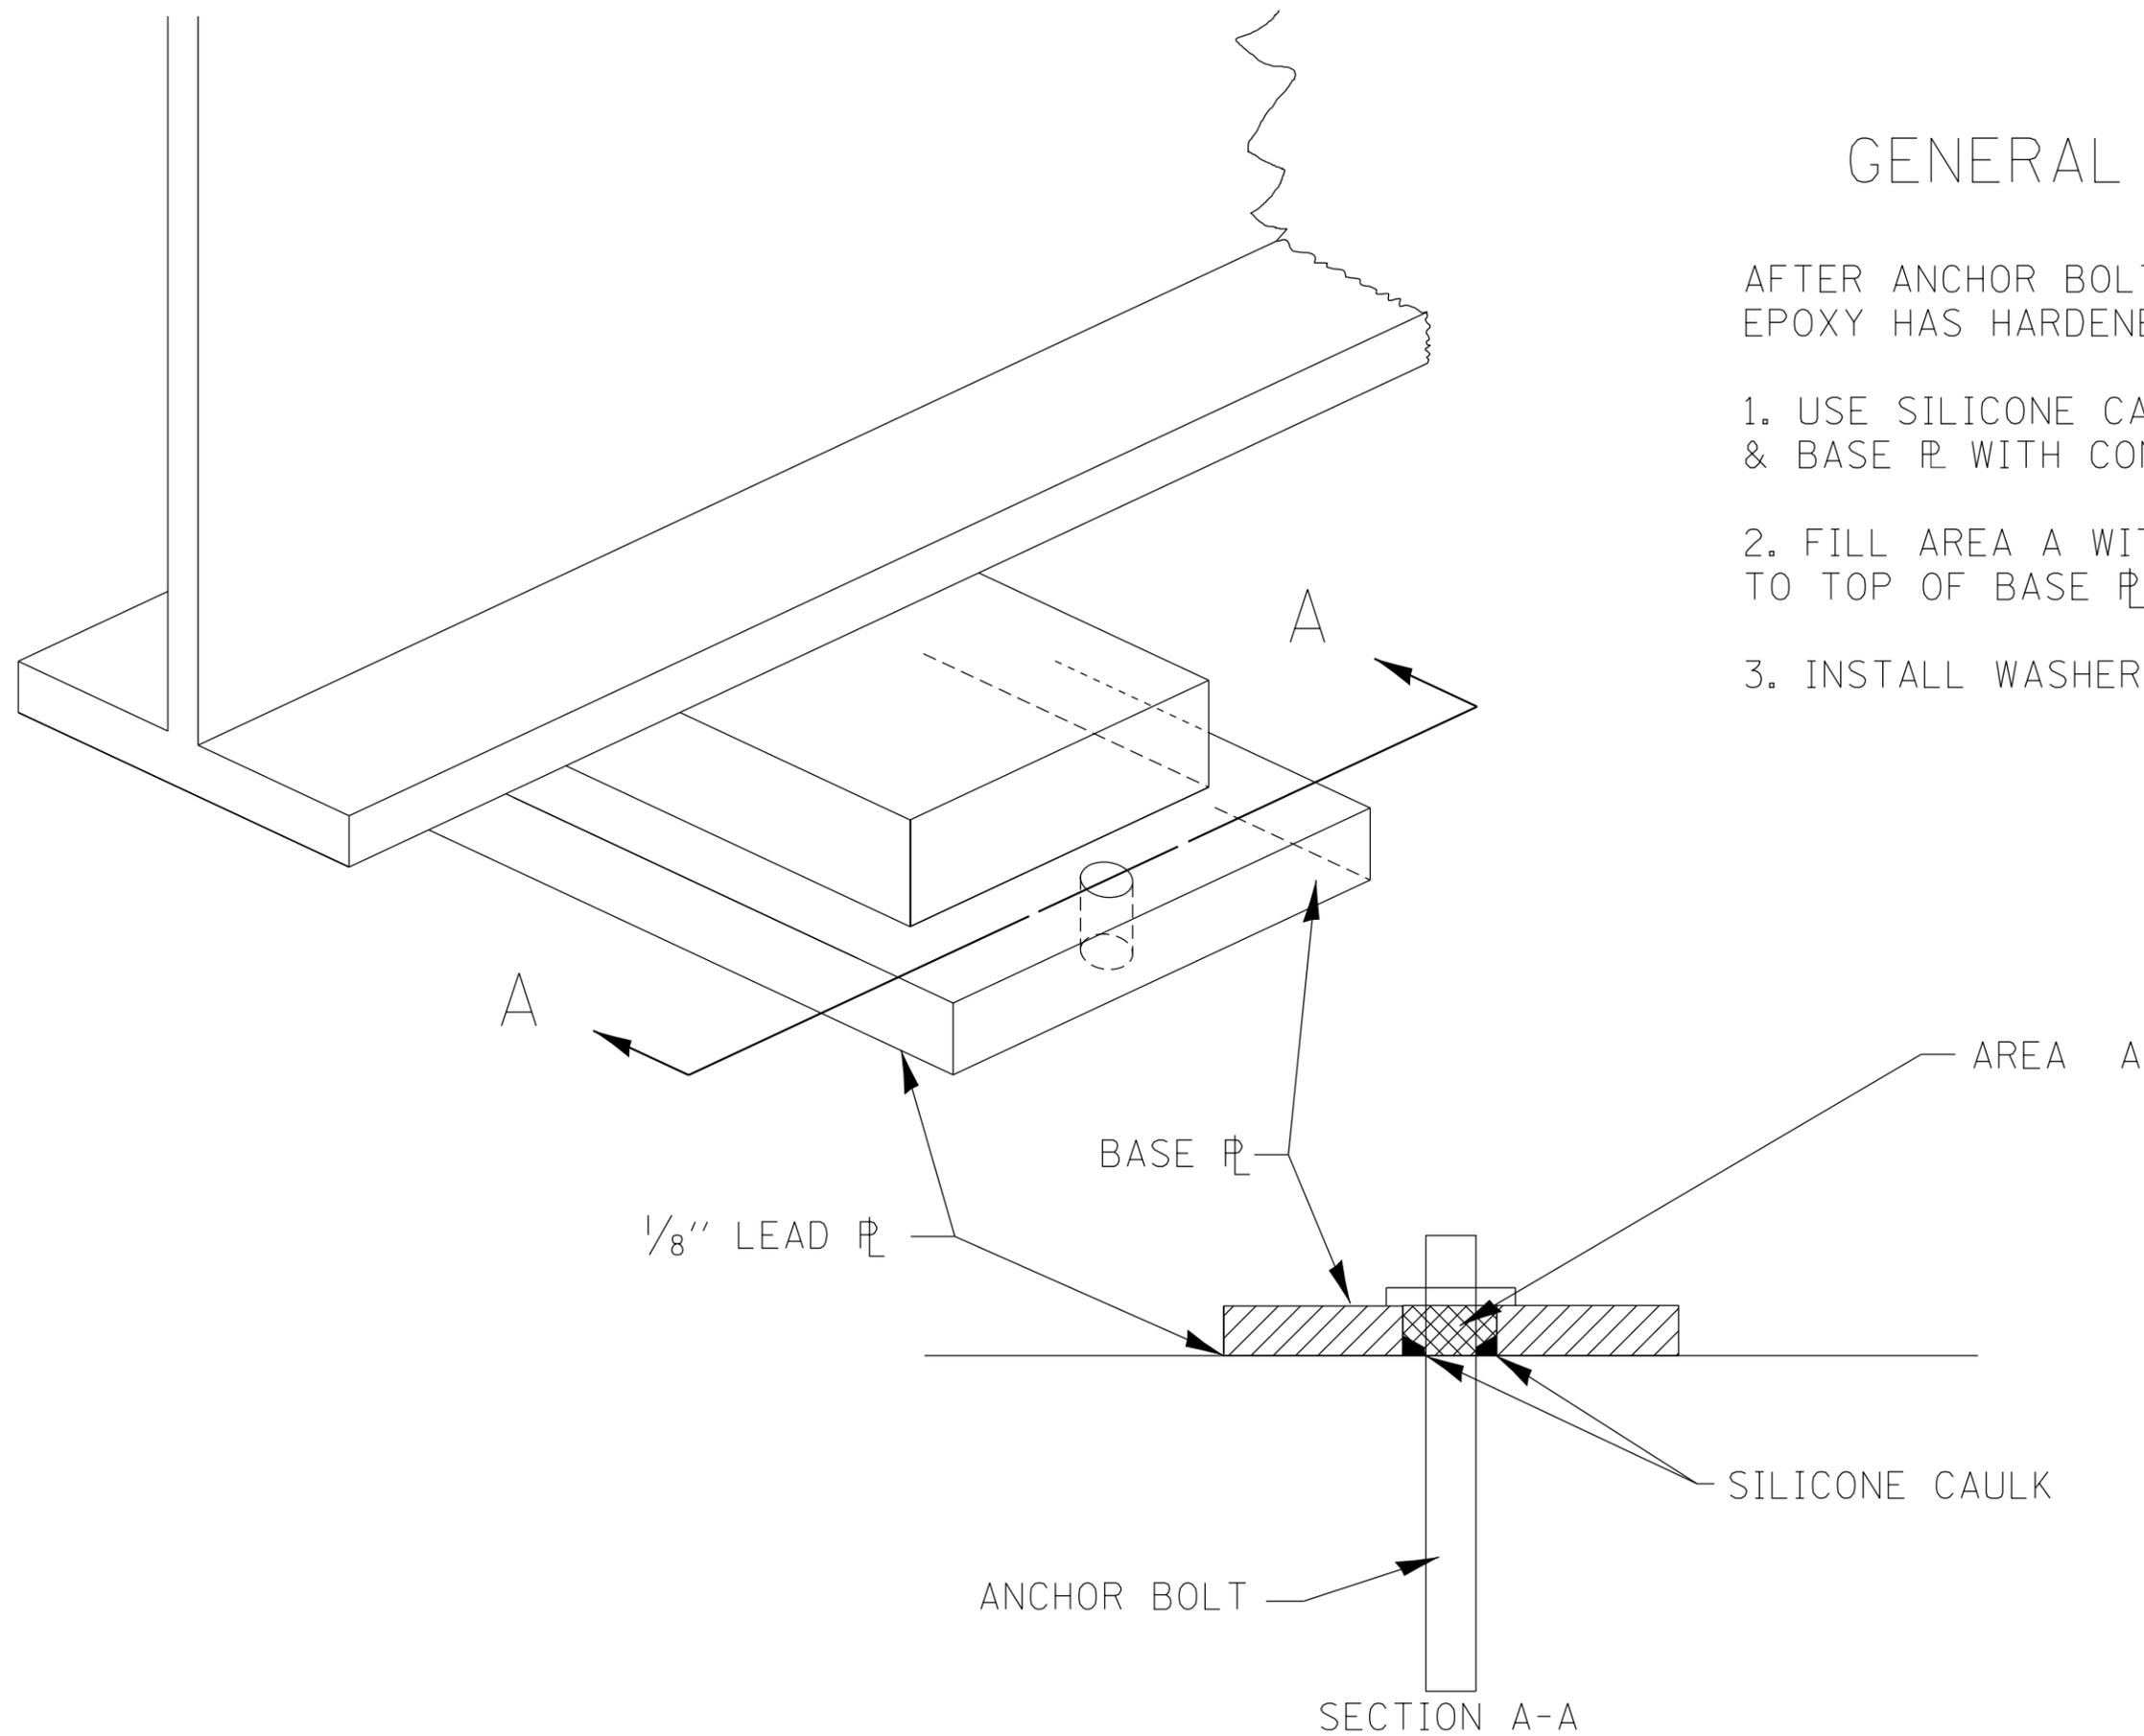

All dimensions are in inches (millimeters) unless otherwise noted.

STATE OF ILLINOIS
DEPARTMENT OF TRANSPORTATION

BEARING PLATE DETAIL

NOT TO SCALE

CADD STD. 505001-D4

F.A. RTE.	SECTION	COUNTY	TOTAL SHEETS	SHEET NO.
CONTRACT NO.				
FED. ROAD DIST. NO.	ILLINOIS FED. AID PROJECT			