


Note:
The area below the box and wingwalls

represented by 6 inches shall be over excavated by 6 inches and filled with CA-7 or CA-11 to provide a level platform. Cost included with Concrete Box Culverts

SEQUENCE OF CONSTRUCTION

- 1. Remove existing culvert.
 2. Construct proposed culvert.
 3. Place Granular Culvert Backfill.
 4. Pave roadway

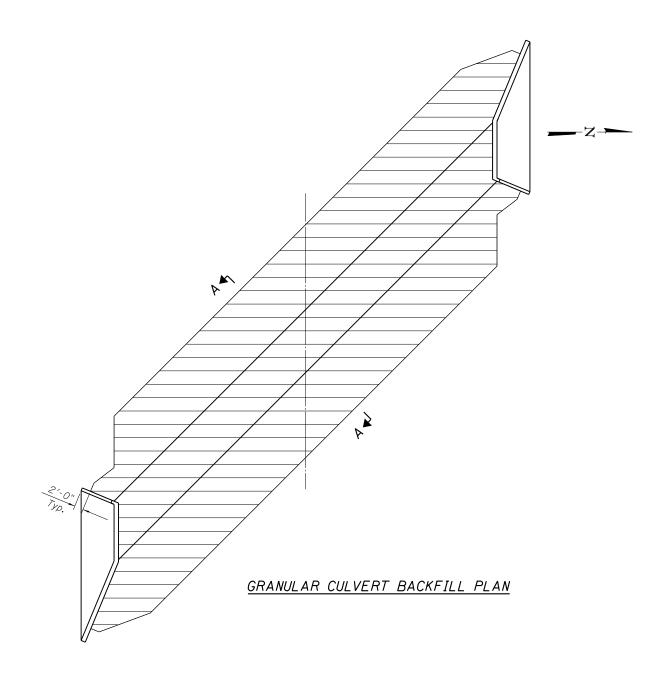

DESIGNED - RJP	EXAMINED		DATE -	STATE OF ILLINOIS DEPARTMENT OF TRANSPORTATION	GENERAL DATA	F.A.P. RTF.
CHECKED - ADL	PASSED _	ENGINEER OF BRIDGE DESIGN	- <u> </u>		STRUCTURE NUMBER 001-7129	63
DRAWN - RJP			REVISED - SEB 10-25-13			
CHECKED - ADL		ENGINEER OF BRIDGES AND STRUCTURES	- REVISED		SHEET NO. 2 OF 5 SHEETS	

ILLINOIS FED. AID PROJECT

SECTION (1)CR-1, (2)CR
 COUNTY
 TOTAL SHEETS NO.

 ADAMS
 43
 18

 CONTRACT
 NO.
 72C12