
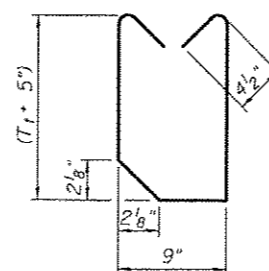


TOEWALL CONSTRUCTION SEQUENCE

1. Perform excavation and construct toewall.
2. Backfill accordingly and prepare bedding for box culvert end sections.
3. Construct remainder of box culvert end section.

Note:

If soil conditions permit, the toewall may be poured monolithically with the bottom slab of the end section using Alt. Section D-D subject to approval from the Engineer.

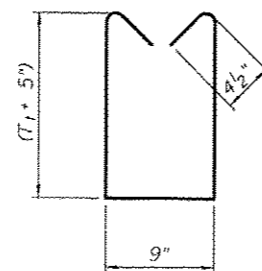

FILE NAME: c:\pwork\pudot\ceerlock\jvd8129316\0378663\alt-structure.dgn	USER NAME: ceerlock_jd	DESIGNED: -	REVISED: -	STATE OF ILLINOIS DEPARTMENT OF TRANSPORTATION	MULTI-CELL PRECAST CONCRETE BOX CULVERT APRON END SECTION DETAILS	F.A.U. RTE.	SECTION	COUNTY	TOTAL SHEETS	SHEET NO.
		CHECKED: -	REVISED: -			• (2X,3)RS-3 & 2RS-4	Champaign	551	190	
		DRAWN: -	REVISED: -			• F.A.U. 7152 & F.A.S. 1512	CONTRACT NO. 70663			
		CHECKED: -	REVISED: -			ILLINOIS FED. AID PROJECT				
					SHEET NO. 4 OF 5 SHEETS					