

TEMPORARY HOT-MIX ASPHALT TRANSITIONS

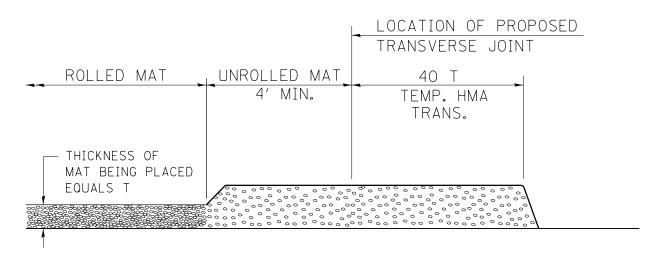

STEP I

- 1. PLACE HOT-MIX ASPHALT MAT, LENGTH 40 TIMES THE THICKNESS OF THE MAT BEING PLACED PAST THE PROPOSED TRANSVERSE JOINT LOCATION USING NORMAL OPERATING PROCEDURES.
- 2. EXTREME CARE SHOULD BE TAKEN TO MAINTAIN ENOUGH MATERIAL IN FRONT OF THE SCREED TO MAINTAIN REQUIRED PAVING DEPTH.

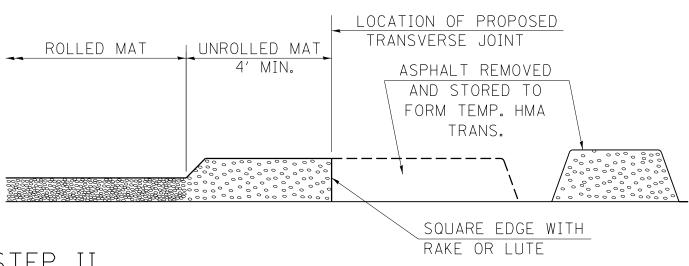


STEP II

- 1. MOVE THE PAVER OUT OF THE WAY AND REMOVE THE ASPHALT FROM THE AREA OF THE PROPOSED TEMPORARY HOT-MIX ASPHALT TRANSITION.
- 2. SQUARE UP THE END OF THE MAT WITH A RAKE OR LUTE.
- 3. NOTE THAT THE MAT WITHIN 4' OF THE END OF JOINT IS NOT TO BE ROLLED AT THIS TIME.


DATE

REVISED

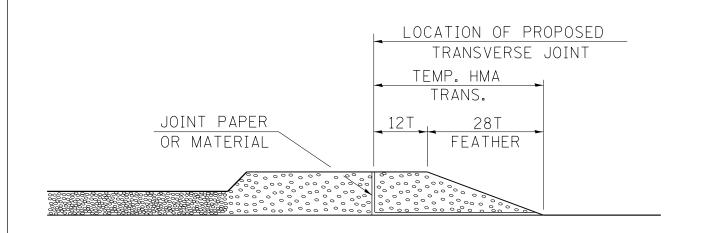

STEP III

- 1. JOINT PAPER OR OTHER PRESELECTED JOINT MATERIAL IS THEN PLACED IN THE CLEARED AREA AND THE EXCESS ASPHALT USED TO HAND FORM A TRANSITION TO THE DIMENSIONS SHOWN ABOVE.
- 2. NOTE THAT IN CONSTRUCTING THE TRANSITION. THE MAT DEPTH IS CONTINUED AS PART OF THE TRANSITION BEFORE FORMING THE FEATHER.

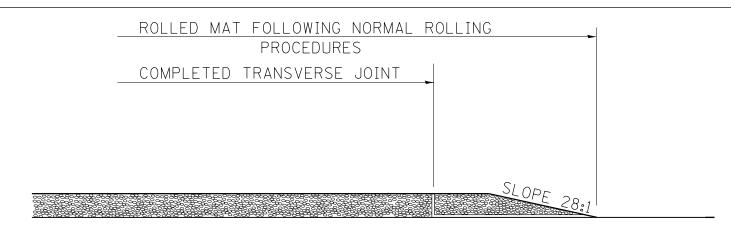

STEP IV

- 1. COMPLETE TEMPORARY TRANSITION BY ROLLING.
- 2. TO RESUME PAVING, AT THE JOINT, REMOVE TEMPORARY TRANSITION AND DISPOSE OF THE MATERIAL ACCORDING TO ART. 202.03 OF THE STD. SPECS. (COST INCLUDED IN THE CONTRACT).
- 3. CONSTRUCTING THE TEMPORARY TRANSITIONS WILL NOT BE PAID FOR SEPARATELY IN ACCORDANCE WITH ARTICLE 406.14 OF THE STANDARD SPECIFICATIONS.

REVISIONS

REDRAWN	2-15-89
REVISED	8-16-94
REVISED	01-09-07
RESIZED	05-8-08
DEVICED	0 - 10 17

DESIGNED REVISED :\pw_work\pwidot\brandonia\d0270826\d978270-sht-plan.dgn REVISED PLOT SCALE = 100.0000 '/ in. CHECKED REVISED

PLOT DATE = 6/5/2014

STATE OF ILLINOIS **DEPARTMENT OF TRANSPORTATION** TEMPORARY HOT-MIX ASPHALT TRANSITIONS SHEET NO. OF SHEETS STA.

STD. 9-26 [REVISED | 05-16-13 JOHNSON 26 24 38RS-5 CONTRACT NO. 78270