

RECESSED REFLECTIVE MARKERS


INSTALLATION NOTES:


- 1. SAWCUT IN DIMENSIONS SHOWN.
- 2. SAWCUT AREAS TO BE DRY AND FREE OR MATERIAL THAT ADVERSELY AFFECTS THE ADHESIVE BAND.
- 3. INSTALL THE REFLECTOR WITH AN APPROVED TWO-COMPONENT EPOXY ADHESIVE. EPOXY SHOULD NOT OBSCURE OR BLOCK THE LENS.
- 4. INSTALL TOP OF REFLECTOR 1/2 TO 1/4 INCH BELOW THE PAVEMENT SURFACE.
- 5. REFLECTOR SHALL BE 3M SERIES 290.

GENERAL NOTES:

- 1. INSTALLATION SHALL CONFORM TO IDOT HIGHWAY STANDARD 781001-02 (OR LATEST) FOR MARKER PLACEMENT.
- 2. IDOT STANDARD 781001-02 SHALL BE WODIFIED TO REFLECT IN RECESSED PAVEMENT MARKERS INSTEAD OF RAISED PAVEMENT MARKERS.

RECESSED REFLECTIVE PAVEMENT MARKINGS DETAIL



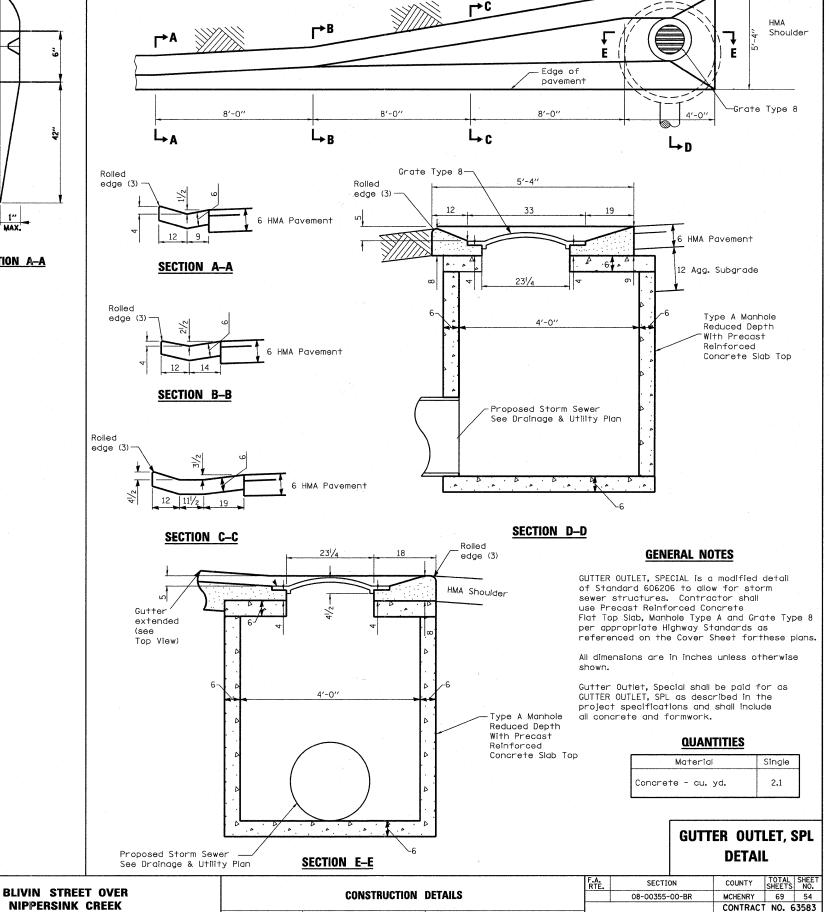

TO STA.

FED ROAD DIST NO. 1 ILLINOIS FED AID PROJECT

SCALE: N.T.S. SHEET NO. 54 OF 69 SHEETS STA.

TOP VIEW

r→ D

B