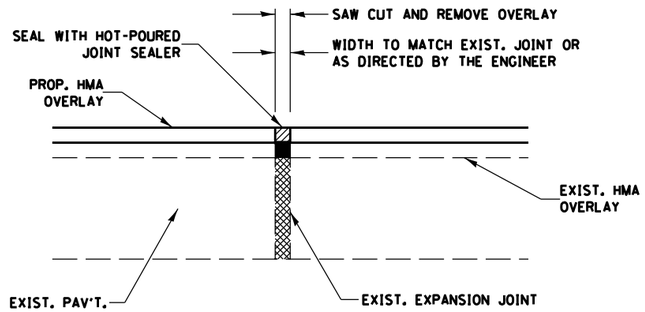

EXPANSION JOINT REHABILITATION DETAIL

GENERAL NOTES:

1. THE NEW HMA OVERLAY SHALL BE SAWED, REMOVED AND THE JOINT AREA CLEANED. PRIOR TO PLACING THE HOT-POURED JOINT SEALER, THE JOINT SHALL BE BLOWN OUT WITH COMPRESSED AIR.

2. THIS WORK WILL BE PAID FOR AT THE CONTRACT UNIT PRICE PER FOOT FOR EXPANSION JOINT REHABILITATION.

406–7

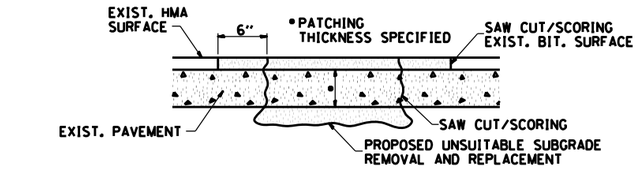

SEQUENCE OF CONSTRUCTION

1. REMOVE THE EXISTING HMA SURFACE.
2. REMOVE AND REPLACE FULL DEPTH PATCHES.
3. REPLACE HMA SURFACE.

GENERAL NOTES

1. THE WIDTH OF THE FULL DEPTH PATCH OVER A TRENCH SHALL BE 12" WIDER ON EACH SIDE OF THE TRENCH.

2. FOR BASIS OF PAYMENT SEE SPECIAL PROVISION "PATCHING WITH HMA OVERLAY REMOVAL".

PAVEMENT PATCHING FOR HMA SURFACED PAVEMENT

442–1